




**HIRSCHMANN**

A **BELDEN** BRAND

# User Manual

## Installation Industrial Ethernet Bobcat Xtreme Performance BXP Family

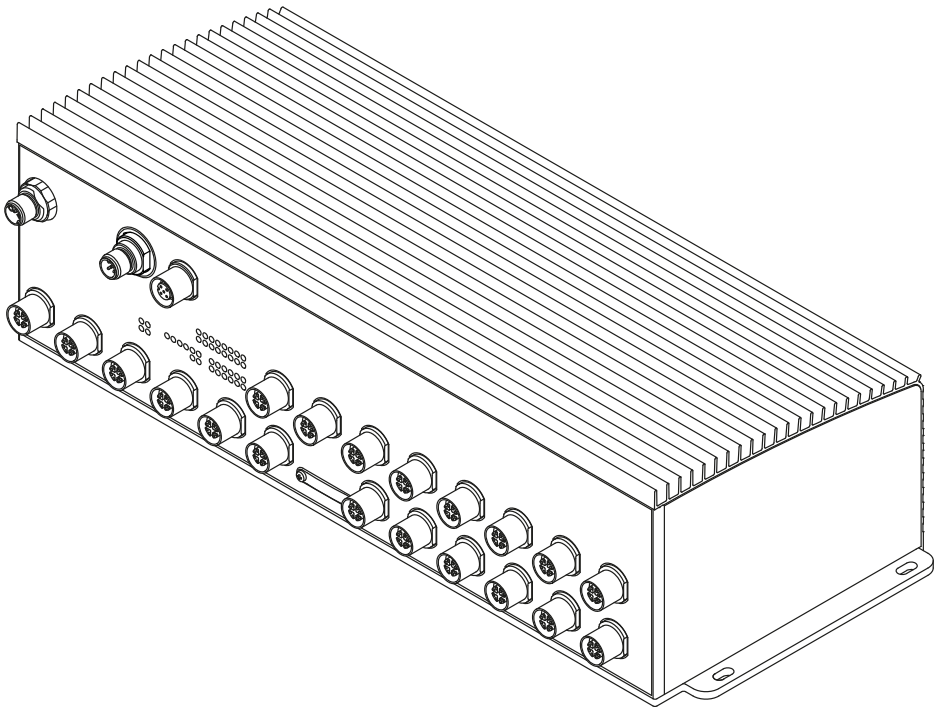

The naming of copyrighted trademarks in this manual, even when not specially indicated, should not be taken to mean that these names may be considered as free in the sense of the trademark and tradename protection law and hence that they may be freely used by anyone.

© 2024 Hirschmann Automation and Control GmbH

Manuals and software are protected by copyright. All rights reserved. The copying, reproduction, translation, conversion into any electronic medium or machine scannable form is not permitted, either in whole or in part. An exception is the preparation of a backup copy of the software for your own use.

The performance features described here are binding only if they have been expressly agreed when the contract was made. This document was produced by Hirschmann Automation and Control GmbH according to the best of the company's knowledge. Hirschmann Automation and Control GmbH reserves the right to change the contents of this document without prior notice. Hirschmann Automation and Control GmbH can give no guarantee in respect of the correctness or accuracy of the information in this document.

Hirschmann Automation and Control GmbH can accept no responsibility for damages, resulting from the use of the network components or the associated operating software. In addition, we refer to the conditions of use specified in the license contract.

You can get the latest version of this manual on the Internet at:  
<https://www.doc.hirschmann.com>

Hirschmann Automation and Control GmbH  
Stuttgarter Str. 45-51  
72654 Neckartenzlingen  
Germany

# About this manual

The “Installation” user manual contains a device description, safety instructions, a description of the display, and the other information that you need to install the device.

Documentation mentioned in the “Installation” user manual that is not supplied with your device as a printout can be found as PDF files for downloading on the Internet at: <https://www.doc.hirschmann.com>

# Important information

Read these instructions carefully, and familiarize yourself with the device before trying to install, operate, or maintain it. The following notes may appear throughout this documentation or on the device. These notes warn of potential hazards or call attention to information that clarifies or simplifies a procedure.

# Warning symbols



This is a general warning symbol. This symbol alerts you to potential personal injury hazards. Observe all safety notes that follow this symbol to avoid possible injury or death.



If this symbol is displayed in addition to a safety instruction of the type "Danger" or "Warning", it means that there is a danger of electric shock and failure to observe the instructions will inevitably result in injury.



This symbol indicates the danger of hot surfaces on the device. In connection with safety instructions, non-observance of the instructions will inevitably result in injuries.

## **DANGER**



**DANGER** draws attention to an immediately dangerous situation, which will inevitably result in a serious or fatal accident if not observed.

## **WARNING**



**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

## **CAUTION**



**CAUTION** indicates a possible danger which, if not avoided, may result in minor injuries.

## NOTICE

**NOTICE provides information about procedures that do not involve the risk of injury.**

# Contents

|  |           |
|--|-----------|
| About this manual.....   | 3         |
| Important information.....   | 4         |
| Warning symbols.....   | 5         |
| <b>1. Safety instructions.....</b>                                 | <b>10</b> |
| 1.1. Qualification requirements for personnel.....                 | 11        |
| 1.2. Intended use.....   | 11        |
| 1.3. Installation site requirements.....                           | 12        |
| 1.4. Device casing.....  | 12        |
| 1.5. Strain relief.....  | 12        |
| 1.6. Electrical connections.....                                   | 13        |
| 1.6.1. Grounding the device.....                                   | 13        |
| 1.6.2. Shielding ground.....                                       | 13        |
| 1.6.3. General requirements for connecting electrical wires.....   | 13        |
| 1.6.4. General requirements for connecting the supply voltage..... | 14        |
| 1.6.5. Requirements for connecting the signal contact.....         | 15        |
| 1.7. Recycling note.....   | 16        |
| <b>2. Approvals.....</b>   | <b>17</b> |
| 2.1. CE marking.....   | 17        |
| 2.2. FCC note.....   | 18        |
| <b>3. Description.....</b>   | <b>19</b> |
| 3.1. Device name and product code.....                             | 20        |
| 3.2. Device views.....   | 23        |
| 3.2.1. Front view.....   | 23        |
| 3.3. Power supply.....   | 26        |
| 3.3.1. Supply voltage 110 V DC.....                                | 26        |
| 3.4. Management Interfaces.....                                    | 26        |
| 3.4.1. V.24 interface (external management).....                   | 26        |

|  |           |
|--|-----------|
| 3.4.2. SD card interface.....                                | 27        |
| 3.5. Ethernet ports.....                                     | 27        |
| 3.5.1. Twisted pair port 10/100/1000 Mbit/s.....             | 28        |
| 3.5.2. Twisted pair port 1/2.5/10 Gbit/s.....                | 29        |
| 3.5.3. Support of PoE+/++.....                               | 30        |
| 3.6. Display elements.....                                   | 33        |
| 3.6.1. Device status.....                                    | 33        |
| 3.6.2. Port status.....                                      | 35        |
| 3.6.3. PoE status.....                                       | 36        |
| 3.7. Input/output interfaces.....                            | 37        |
| 3.7.1. Digital input.....                                    | 38        |
| 3.7.2. Signal contact.....                                   | 38        |
| <b>4. Installation.....</b>                                  | <b>40</b> |
| 4.1. Checking the package contents.....                      | 40        |
| 4.2. Mounting the device.....                                | 40        |
| 4.2.1. Mounting on a flat surface.....                       | 42        |
| 4.3. Grounding the device.....                               | 47        |
| 4.4. Connecting the supply voltage.....                      | 48        |
| 4.4.1. Supply voltage 110 V DC.....                          | 48        |
| 4.5. Connecting data cables.....                             | 49        |
| <b>5. Basic settings.....</b>                                | <b>51</b> |
| 5.1. Default settings.....                                   | 51        |
| 5.2. First login (Password change).....                      | 51        |
| <b>6. Monitoring the temperature of the metal plate.....</b> | <b>53</b> |
| <b>7. Maintenance and service.....</b>                       | <b>54</b> |
| <b>8. Disassembly.....</b>                                   | <b>55</b> |
| 8.1. Removing the device.....                                | 55        |
| <b>9. Technical data.....</b>                                | <b>56</b> |
| 9.1. General data.....                                       | 56        |
| 9.2. Supply voltage.....                                     | 56        |



|  |           |
|--|-----------|
| 9.2.1. Supply voltage 110 V DC.....            | 56        |
| 9.3. Power consumption/power output.....       | 57        |
| 9.4. Signal contact.....                       | 57        |
| 9.5. Digital input.....                        | 58        |
| 9.6. Dimension drawings.....                   | 59        |
| 9.6.1. Dimension drawings.....                 | 59        |
| 9.7. Climatic conditions during operation..... | 60        |
| 9.8. Climatic conditions during storage.....   | 60        |
| 9.9. Immunity.....                             | 61        |
| 9.10. Electromagnetic compatibility (EMC)..... | 62        |
| 9.10.1. EMC interference emission.....         | 62        |
| 9.10.2. EMC interference immunity.....         | 63        |
| 9.11. Accessories.....                         | 66        |
| 9.12. Scope of delivery.....                   | 66        |
| 9.13. Order numbers.....                       | 66        |
| 9.14. Underlying technical standards.....      | 67        |
| <b>A. Further support.....</b>                 | <b>69</b> |

# 1. Safety instructions

## WARNING



### **UNCONTROLLED MACHINE ACTIONS** **Failure to follow these instructions can result in death, serious injury, or equipment damage.**

To avoid uncontrolled machine actions caused by data loss, configure all the data transmission devices individually.

Before you start any machine which is controlled via data transmission, be sure to complete the configuration of all data transmission devices.

You operate this device with electricity. Improper usage of the device entails the risk of physical injury or significant property damage. The proper and safe operation of this device depends on proper handling during transportation, proper storage and installation, and careful operation and maintenance procedures.

- Verify that the electrical installation meets local or nationally applicable safety regulations.
- Before connecting any cable, read this document, and the safety instructions and warnings.
- Operate the device with undamaged components exclusively.
- The device is free of any service components. In case of a damaged or malfunctioning device, turn off the supply voltage and return the device to Hirschmann for inspection.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

# 1.1. Qualification requirements for personnel

Only allow qualified personnel to work on the device.

Qualified personnel have the following characteristics:

- Qualified personnel are properly trained. Training as well as practical knowledge and experience make up their qualifications. This is the prerequisite for grounding and labeling circuits, devices, and systems in accordance with current standards in safety technology.
- Qualified personnel are aware of the dangers that exist in their work.
- Qualified personnel are familiar with appropriate measures against these hazards in order to reduce the risk for themselves and others.
- Qualified personnel receive training on a regular basis.

## 1.2. Intended use

- Use the product only for the application cases described in the Hirschmann Automation and Control GmbH product information, including this manual.
- Operate the product only according to the technical specifications.

See [General data on page 56](#)

- Connect to the product only components suitable for the requirements of the specific application case.

## 1.3. Installation site requirements

- Exclusively install this device in a restricted access location, to which maintenance staff have exclusive access. Install the device in such a way that it is protected against mechanical forces in the area of the power supply.
- Exclusively install the device indoors.
- Exclusively mount the device on a suitable flat metal surface made from solid metal without any holes to ensure adequate cooling of the device.

The maximum temperature allowed for the flat metal surface is +70 °C (+158 °F).

## 1.4. Device casing

Only technicians authorized by the manufacturer are permitted to open the casing.

- Keep the cooling fins free to ensure good air circulation.
- The surfaces of the device casing may become hot. Avoid touching the device while it is operating.
- For operation according to EN 45545-2 HL3: Seal all unused connections and ports exclusively with metal protection screws and metal screw caps. The use of plastic protection screws is prohibited. Protection screws and screw caps made of metal are available as [Accessories on page 66](#).

## 1.5. Strain relief

**Note:** If the strain relief is insufficient, there is a potential risk of torsion, contact problems and creeping interruptions.

- Relieve the connection points of cables and lines from mechanical stress.
- Design strain reliefs in such a way that they help prevent any mechanical damage to cables, wires or conductors caused by external influences or their own weight.
- To help prevent damage to device connections, connectors and cables, follow the instructions for proper installation in accordance with DIN VDE 0100-520:2013-06, sections 522.6, 522.7 and 522.13.

## 1.6. Electrical connections

### 1.6.1. Grounding the device

Grounding the device is by means of a separate ground connection on the device.

You find more information in chapter [Grounding the device on page 47](#).

- Ground the device before connecting any other cables.
- Disconnect the grounding only after disconnecting all other cables.

### 1.6.2. Shielding ground

The overall shield of a connectable power supply cable is connected to the ground connection on the metal casing as a conductor.

### 1.6.3. General requirements for connecting electrical wires

Before connecting the electrical wires, **always** verify that the requirements listed are complied with. The following requirements apply without restriction:

- The electrical wires are voltage-free.
- The device is grounded via the designated ground connection(s).
- The cross-section of the ground conductor is the same size or larger than the cross-section of the power supply cables.
- The connected voltage is limited by a current limitation device or a fuse.
- The device is only switched on after installation.
- The ground connection is disconnected only after all other cables have been disconnected.
- The cables used are permitted for the temperature range of the application case.



Relevant for North America: Exclusively use +60/75 °C (+140/167 °F or +75 °C (+167 °F) copper wire (Cu wire).

- A UL certified cable with a suitable evaluation is used to connect devices (CYJV or PVVA).
- The external circuits intended to be connected to this device are separated from the mains supply or hazardous live voltage by reinforced or double insulation.

## 1.6.4. General requirements for connecting the supply voltage

Before connecting the supply voltage, **always** verify that the requirements listed are complied with. The following requirements apply without restrictions:

- Verify that the power supply feeding the device has double or reinforced insulation.
- The supply voltage corresponds to the voltage specified on the type plate of the device.
- The power supply cable is suitable for the required voltage, current, and physical load.
- The cross-section of the ground conductor is the same size as or larger than the cross-section of the power supply cables.
- The power supply conforms to overvoltage category I or II.
- The power supply conforms to NEC Class 2.
- The power supply has an easily accessible disconnecting device (for example a switch or a plug). This disconnecting device is clearly labelled and identifiable, so that in case of an emergency it is clear which power supply the disconnecting device belongs to.
- The power supply is potential-free.
- The conductor cross-section of the power supply cable is at least  $0.75 \text{ mm}^2$  (18 AWG) on the supply voltage input of the device.

## 1.6.5. Requirements for connecting the signal contact

Before connecting the signal contact, **always** verify that the requirements listed are complied with. The following requirements apply without restriction:

- The connected voltage is limited by a current limitation device or a fuse.
- The electrical threshold values for the signal contact are observed.

[Signal contact on page 57](#)

## 1.7. Recycling note



The symbol of a crossed-out wheeled bin shown on the device indicates that the device **MUST NOT** be disposed of with household waste at the end of its service life.

After its service life, the used device must be disposed of properly as electronic waste in accordance with the locally applicable disposal regulations.

End users are responsible for deleting personal data from the used device prior to disposal.

End users are obliged to separate used batteries and accumulators that are not enclosed by the used device from the used device in a non-destructive manner before disposing of the used device. The used batteries and accumulators must be handed in for separate collection. This does not apply if the used device is handed in for reuse.



## 2. Approvals

### 2.1. CE marking

The labeled devices comply with the regulations contained in the following European directive(s):

- **2011/65/EU and 2015/863/EU (RoHS)**  
Directive of the European Parliament and of the Council on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- **2014/30/EU (EMC)**  
Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.

In accordance with the above-named EU directive(s), the EU conformity declaration will be available to the relevant authorities at the following address:

Hirschmann Automation and Control GmbH  
Stuttgarter Str. 45-51  
72654 Neckartenzlingen  
Germany

You can download the PDF file of the EU conformity declaration at: <https://www.doc.hirschmann.com/certificates.html>

The device can be used in industrial environments.

- Interference immunity: EN 61000-6-2
- Emitted interference: EN 55032
- Safety: IEC/EN 62368-1

For more information, see [General data on page 56](#)

The assembly guidelines provided in these instructions must be strictly adhered to in order to observe the EMC threshold values.

**Warning!** This is a Class A device. This device can cause interference in living areas, and in this case the operator may be required to take appropriate measures.

## 2.2. FCC note

### Supplier's Declaration of Conformity

#### 47 CFR § 2.1077 Compliance Information

Bobcat Xtreme Performance

BXP Family

#### U.S. Contact Information

Belden Inc. – St. Louis  
1 N Brentwood Blvd. 15th Floor  
St. Louis, Missouri 63105,  
United States  
Phone: 314.854.8000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

# 3. Description

The next-generation Industrial Ethernet Switch Bobcat Xtreme Performance (BXP) with up to 28 ports (6 × 10 Gbit/s and 22 × 1 Gbit/s) and various configurations is characterized by a robust metal casing with M12 connectors. Designed for industrial environments and transportation market conditions, BXP devices support the following key features:

- Wide temperature range: -40 °C ... +70 °C (-40 °F ... +158 °F)
- PoE(+/++)
- Multiple interface combinations including: Fast Ethernet, 1 Gbit/s, 2.5 Gbit/s, and 10 Gbit/s
- HiOS Software
- IP degree of protection IP40
- Supply voltage: 110 V DC

The device allows you to set up switched Industrial Ethernet networks according to the standard IEEE 802.3.

You can choose from a wide range of variants based on your individual requirements:

- Number of ports
- Transmission speed
- Temperature range
- Supply voltage range
- Certifications
- Software level

Type of the device mounting:

- Mounting on a flat surface

There are convenient options for managing the device. Manage your devices via:

- Web browser
- SSH
- Telnet
- Network management software (for example Industrial HiVision)

The Network Management Software Industrial HiVision provides you with options for smooth configuration and monitoring. You find further information on the Internet at the Hirschmann product pages:

<https://www.hirschmann.com/en/QR/INET-Industrial-HiVision>

- V.24 interface (locally on the device)

The device provides you with a large range of functions, which the manuals for the operating software inform you about. You can download these manuals as PDF files from the Internet at: <https://www.doc.hirschmann.com>

## 3.1. Device name and product code

The device name corresponds to the product code. The product code is made up of characteristics with defined positions. The characteristic values stand for specific product properties.

You find a list of available device variants in chapter [Order numbers on page 66](#).

**Table 1. Device name and product code**

| Item       | Characteristic | Characteristic value | Description                     |
|------------|----------------|----------------------|---------------------------------|
| 1 ...<br>3 | Product        | BXP                  | Bobcat Xtreme Performance       |
| 4          | Data rate      | 6                    | 1 Gbit/s, 2.5 Gbit/s, 10 Gbit/s |
| 5          | Hardware type  | 0                    | Standard                        |
|            |                | 2                    | Standard plus PoE(+ / ++)       |
| 6          | (hyphen)       | -                    |                                 |

**Table 1. Device name and product code (continued)**

| Item         | Characteristic  | Characteristic value | Description  |
|--------------|---|----------------------|--|
| 7 ...<br>8   | Number:<br>(10)/100/1000 Mbit/s ports                 | 14<br>22             | 14 ×<br>22 ×<br>(10)/100/1000 Mbit/s ports                                   |
| 9 ...<br>10  | Number:<br>100/1000/2500 Mbit/s ports                 | 00                   | 0 ×<br>100/1000/2500 Mbit/s ports  |
| 11 ...<br>12 | Number:<br>1 Gbit/s, 2.5 Gbit/s, 10 Gbit/s            | 06                   | 6 ×<br>1/2.5/10 Gbit/s ports   |
| 13           | Configuration of the <b>first uplink port group</b>   | I                    | 2 ×<br>TX-M12 "X"-coded<br>(1/2.5/10 Gbit/s, M12)                            |
|              |   | K                    | 2 ×<br>TX-M12 "X"-coded, with Bypass relay<br>(1/2.5/10 Gbit/s, M12)         |
| 14           | Configuration of the <b>second uplink port group</b>  | I                    | 2 ×<br>TX-M12 "X"-coded<br>(1/2.5/10 Gbit/s)                                 |
|              |   | K                    | 2 ×<br>TX-M12 "X"-coded, with Bypass relay<br>(1/2.5/10 Gbit/s)              |
| 15           | Configuration of the <b>third uplink port group</b>   | I                    | 2 ×<br>TX-M12 "X"-coded<br>(1/2.5/10 Gbit/s)                                 |
|              |   | S                    | 2 ×<br>TX-M12 "X"-coded + PoE+/++<br>(1/2.5/10 Gbit/s)                       |
| 16           | Configuration of the <b>first standard port pair</b>  | G                    | 6 ×<br>TX-M12 "X"-coded<br>(10/100/1000 Mbit/s)                              |
|              |   | H                    | 6 ×<br>TX-M12 "X"-coded + PoE+/++<br>(10/100/1000 Mbit/s)                    |
| 17           | Configuration of the <b>second standard port pair</b> | E                    | 8 ×<br>TX-M12 "X"-coded<br>(10/100/1000 Mbit/s)                              |
|              |   | F                    | 8 ×<br>TX-M12 "X"-coded + PoE+<br>(10/100/1000 Mbit/s)                       |
| 18           | Configuration of the <b>third standard port pair</b>  | 9                    | 0 ×<br>not configurable  |
|              |   | E                    | 8 ×<br>TX-M12 "X"-coded<br>(10/100/1000 Mbit/s)                              |
|              |   | F                    | 8 ×<br>TX-M12 "X"-coded + PoE+<br>(10/100/1000 Mbit/s)                       |
| 19           | (hyphen)  | –                    |  |
| 20           | Temperature range                                     | V                    | Standard with Conformal Coating<br>–40 °C ... +60 °C<br>(–40 °F ... +140 °F) |
|              |   | E                    | Extended with Conformal Coating<br>–40 °C ... +70 °C<br>(–40 °F ... +158 °F) |

**Table 1. Device name and product code (continued)**

| Item         | Characteristic                | Characteristic value | Description                    |                                |
|--------------|-------------------------------|----------------------|--------------------------------|--------------------------------|
| 21 ...<br>22 | Supply voltage                | MB                   | Rated                          | 110 V DC                       |
|              |                               |                      | Rated voltage range            | 77 V DC / 138 V DC             |
|              |                               |                      | Connection type                | 5-pin, "K"-coded M12 connector |
| 23           | Casing                        | IP40 Metal           |                                |                                |
| 24           | Certificates and declarations | Z                    | CE, FCC, EN 61131, EN 62368-1  |                                |
|              |                               | T                    | Z + EN 50121-4                 |                                |
|              |                               | S                    | Z + EN 50121-4, EN 50155       |                                |
|              |                               | R                    | Z + E1                         |                                |
| 25           | Certificates and declarations | 9                    | no additional approvals        |                                |
|              |                               | T                    | EN 50121-4                     |                                |
|              |                               | S                    | EN 50121-4, EN 50155           |                                |
|              |                               | R                    | E1                             |                                |
| 21 ...<br>27 | Customer-specific version     | HH                   | Hirschmann Standard Unicast    |                                |
|              |                               | HM                   | Hirschmann Standard Multicast  |                                |
| 28           | Technology                    | S                    | Hirschmann Standard Unicast    |                                |
|              |                               | N                    | Hirschmann Standard Multicast  |                                |
| 29           | Software configuration        | E                    | Empty                          |                                |
| 30 ...<br>31 | Software level                | 2S                   | HiOS Layer 2 Advanced Standard |                                |
|              |                               | 2A                   | HiOS Layer 2 Advanced          |                                |
|              |                               | 3A                   | HiOS Layer 3 Advanced          |                                |
| 32 ...<br>36 | Software version              | 09.5.                | Software Version 09.5.         |                                |
|              |                               | XX.X                 | Current software version       |                                |
| 37 ...<br>38 | Maintenance                   | 00                   | Maintenance version 00         |                                |
|              |                               | XX                   | Current maintenance version    |                                |




**Table 2. Description of device elements: Front view of a device variant with 20 ports (non-PoE)**

|    |  |
|----|--|
| 1  | Supply voltage connection<br>5-pin, "K"-coded M12 socket   |
| 2  | Digital input / Signal contact<br>5-pin, "A"-coded M12 socket (male)   |
| 3  | V.24 interface<br>5-pin, "A"-coded M12 socket (female)   |
| 4  | LED display elements for port status   |
| 5  | <b>BXP60/62</b><br>4 × 10/100/1000 Mbit/s twisted pair port<br>8-pin, "X"-coded M12 socket   |
| 6  | <b>BXP60/62</b><br>6 × 10/100/1000 Mbit/s twisted pair port<br>8-pin, "X"-coded M12 socket<br>These ports exclusively support full-duplex. |
| 7  | <b>BXP60/62</b><br>4 × 10/100/1000 Mbit/s twisted pair port<br>8-pin, "X"-coded M12 socket   |
| 8  | SD card: AutoConfiguration Adapter ACA31   |
| 9  | <b>BXP60/62</b><br>6 × 1/2.5/10 Gbit/s twisted pair port<br>8-pin, "X"-coded M12 socket<br>These ports exclusively support full-duplex.    |
| 10 | Connection for protective ground   |
| 11 | LED display elements for device status   |



**Figure 2. Front view of a PoE device variant with 28 ports**

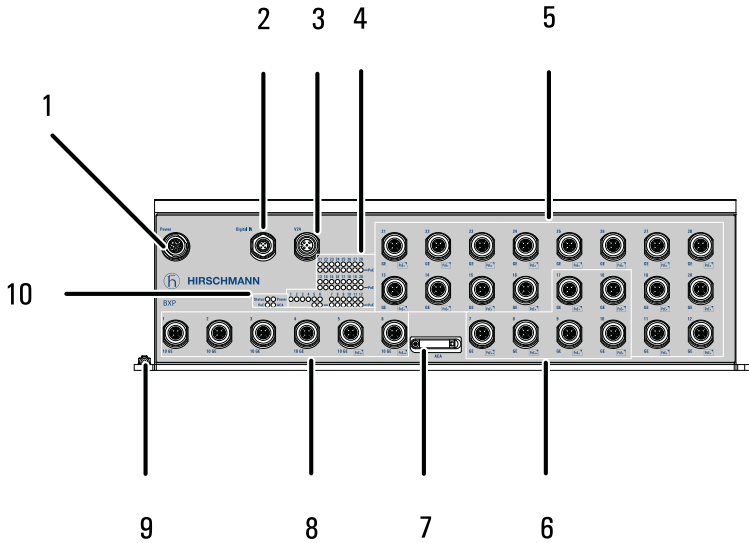

**Table 3. Description of device elements: Front view of a PoE device variant with 28 ports**

|   |   |
|---|---|
| 1 | Supply voltage connection<br>5-pin, "K"-coded M12 socket  |
| 2 | Digital input / Signal contact<br>5-pin, "A"-coded M12 socket (male)  |
| 3 | V.24 interface<br>5-pin, "A"-coded M12 socket (female)  |
| 4 | LED display elements for port status  |
| 5 | <b>BXP60/62</b><br>16 × 10/100/1000 Mbit/s twisted pair port with PoE+<br>8-pin, "X"-coded M12 socket   |
| 6 | <b>BXP60/62</b><br>4 × 10/100/1000 Mbit/s twisted pair port with PoE+<br>2 × 10/100/1000 Mbit/s twisted pair port with PoE++<br>8-pin, "X"-coded M12 socket<br>These ports exclusively support full-duplex. |
| 7 | SD card: AutoConfiguration Adapter ACA31  |
| 8 | <b>BXP60/62</b><br>4 × 1/2.5/10 Gbit/s twisted pair port<br>2 × 1/2.5/10 Gbit/s twisted pair port with PoE++<br>8-pin, "X"-coded M12 socket<br>These ports exclusively support full-duplex.                 |

**Table 3. Description of device elements: Front view of a PoE device variant with 28 ports (continued)**

|    |  |
|----|--|
| 9  | Connection for protective ground       |
| 10 | LED display elements for device status |

## 3.3. Power supply

The following options for power supply are available:

### 3.3.1. Supply voltage 110 V DC

Corresponds in the product code with the supply voltage characteristic value MB.

The power is supplied via a 5-pin, “K”-coded M12 plug.

For information about the position on the device see chapter [Device views on page 23](#).

You will find information on connecting the supply voltage here:

[Supply voltage 110 V DC on page 48](#)

## 3.4. Management Interfaces

### 3.4.1. V.24 interface (external management)

This interface is a 5-pin, “A”-coded M12 socket (female).


For information about the position on the device see chapter [Device views on page 23](#).

The V.24 interface is a serial interface for the local connection of an external management station (VT100 terminal or PC with corresponding terminal emulation). This allows you to set up a connection to the Command Line Interface (CLI) and to the system monitor.

| VT100 terminal settings |           |
|-------------------------|-----------|
| Speed                   | 9600 Baud |
| Data                    | 8 bit     |
| Stopbit                 | 1 bit     |
| Handshake               | off       |
| Parity                  | none      |

The V.24 interface is electrically insulated from the supply voltage.

**Table 4. Pin assignment: V.24 interface**
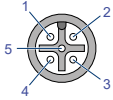
| 5-pin, "A"-coded M12 socket (female)  | Pin | Function |
|---|-----|----------|
|  | 1   | TX       |
|   | 2   | RX       |
|   | 3   | -        |
|   | 4   | GND      |
|   | 5   | -        |

## 3.4.2. SD card interface

### Prerequisite:

Only use Hirschmann SD cards.

For information about the position on the device see chapter [Device views on page 23](#).

The SD card interface allows you to connect the AutoConfiguration Adapter ACA31 storage medium. This is used for saving/loading the configuration data and diagnostic information, and for loading the software.

On the front of the device there is an LED display that informs you about the status of the interface.

## 3.5. Ethernet ports

You have the option to connect end devices or other segments to the ports of the device via twisted pair cables.

### 3.5.1. Twisted pair port 10/100/1000 Mbit/s

This port is an 8-pin, “X”-coded M12 socket.

For information about the position on the device see chapter [Device views on page 23](#).

The 10/100/1000 Mbit/s twisted pair port allows you to connect network components according to the IEEE 802.3 10BASE-T/100BASE-TX/1000BASE-T standard.

This port supports:


- 10 Mbit/s full duplex mode
- 100 Mbit/s full duplex mode
- 1000 Mbit/s full duplex
- Autonegotiation
- Autopolarity
- The pin assignment corresponds to MDI-X.

Delivery state:

- Autonegotiation activated

The port casing is electrically connected to the front panel.

**Table 5. Pin assignment**
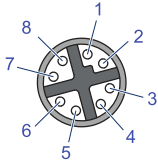
| 8-pin M12 socket, “X”-coded   | Pin | 10/100 Mbit/s | 1000 Mbit/s |
|---|-----|---------------|-------------|
|  | 1   | RX+           | BI_DB+      |
|   | 2   | RX-           | BI_DB-      |
|   | 3   | TX+           | BI_DA+      |
|   | 4   | TX-           | BI_DA-      |
|   | 5   | -             | BI_DC+      |
|   | 6   | -             | BI_DC-      |
|   | 7   | -             | BI_DD-      |

**Table 5. Pin assignment (continued)**

| 8-pin M12 socket, "X"-coded | Pin | 10/100 Mbit/s | 1000 Mbit/s |
|-----------------------------|-----|---------------|-------------|
|                             | 8   | -             | BI_DD+      |

## 3.5.2. Twisted pair port 1/2.5/10 Gbit/s

This port is an 8-pin, "X"-coded M12 socket.

For information about the position on the device see chapter [Device views on page 23](#).

The 1/2.5/10 Gbit/s twisted pair port allows you to connect network components according to the IEEE 802.3 1000BASE-T, IEEE 802.3bz 2.5GBASE-T and IEEE 802.3 and 10GBASE-T standards.

This port supports:


- Autonegotiation
- Autopolarity
- Autocrossing
- 1/2.5/10 Gbit/s full duplex mode
- The pin assignment corresponds to MDI-X.

Delivery state:

- Autonegotiation activated

The port casing is electrically connected to the front panel.

**Table 6. Pin assignment**
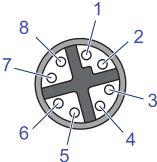
| 8-pin M12 socket, "X"-coded   | Pin | 1/2.5/10 Gbit/s |
|---|-----|-----------------|
|  | 1   | BI_DB+          |
|   | 2   | BI_DB-          |
|   | 3   | BI_DA+          |
|   | 4   | BI_DA-          |
|   | 5   | BI_DC+          |
|   | 6   | BI_DC-          |
|   | 7   | BI_DD-          |
|   | 8   | BI_DD+          |

### 3.5.3. Support of PoE+/\*\*

The device variants featuring hardware type characteristic value 2 support Power over Ethernet (PoE+/\*\*). With the presence of the PoE power supply, a separate power supply for the connected device is unnecessary.

You can identify PoE+/\*\* ports by the following symbols.



Maximum power available to PoE end devices in total: 120 W, divided between the ports:

Port 1 ... 4: 0 W

Port 5 ... 6: 90 W

Port 7 ... 8: 60 W

Port 9 ... 20/28: 30 W

Connect only PoE-powered devices whose data connections are located in the interior of the building and are specified as SELV circuits according to IEC 60950-1 or ES1 circuits according to IEC/EN 62368-1.


The PoE support complies with the following technical standards:

| Technical standard | Description   |
|--------------------|---|
| IEEE 802.3at       | PoE+<br>max. Powered Device (PD) Class 4 (30 W)                             |
| IEEE 802.3bt       | PoE++<br>max. Powered Device (PD) Class 5, 6, 7, 8 (40 W, 51 W, 62 W, 71 W) |

### 3.5.3.1. 10/100/1000 Mbit/s PoE+/++ port

The 10/100/1000 Mbit/s PoE port allows you to connect network components as a powered device (PD) according to standards IEEE 802.3 10BASE-T/100BASE-TX/1000BASE-T, IEEE 802.3af/at and IEEE 802.3bt.


**Table 7. Pin assignment: GE port**
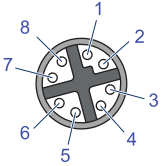
| 8-pin M12 socket, "X"-coded  | Pin | Function | PoE+               | PoE++              |
|--|-----|----------|--------------------|--------------------|
|  | 1   | BI_DB+   | Negative $V^{PSE}$ | Negative $V^{PSE}$ |
|  | 2   | BI_DB-   | Negative $V^{PSE}$ | Negative $V^{PSE}$ |
|  | 3   | BI_DA+   | Positive $V^{PSE}$ | Positive $V^{PSE}$ |
|  | 4   | BI_DA-   | Positive $V^{PSE}$ | Positive $V^{PSE}$ |
|  | 5   | BI_DC+   | -                  | Negative $V^{PSE}$ |
|  | 6   | BI_DC-   | -                  | Negative $V^{PSE}$ |
|  | 7   | BI_DD-   | -                  | Positive $V^{PSE}$ |
|  | 8   | BI_DD+   | -                  | Positive $V^{PSE}$ |

### 3.5.3.2. 1/2.5/10 Gbit/s PoE+/++ port

The 1/2.5/10 Gbit/s PoE port allows you to connect network components as a powered device (PD) according to the IEEE 802.3 1000BASE-T, IEEE 802.3bz 2.5GBASE-T and IEEE 802.3, 10GBASE-T, IEEE 802.3at and IEEE 802.3bt standards.

**Table 8. Pin assignment: GE port**
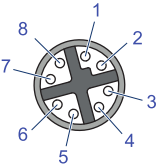
| 8-pin M12 socket, "X"-coded  | Pin | Function | PoE+               | PoE++              |
|--|-----|----------|--------------------|--------------------|
|  | 1   | BI_DB+   | Negative $V^{PSE}$ | Negative $V^{PSE}$ |
|  | 2   | BI_DB-   | Negative $V^{PSE}$ | Negative $V^{PSE}$ |
|  | 3   | BI_DA+   | Positive $V^{PSE}$ | Positive $V^{PSE}$ |
|  | 4   | BI_DA-   | Positive $V^{PSE}$ | Positive $V^{PSE}$ |
|  | 5   | BI_DC+   | -                  | Negative $V^{PSE}$ |
|  | 6   | BI_DC-   | -                  | Negative $V^{PSE}$ |
|  | 7   | BI_DD-   | -                  | Positive $V^{PSE}$ |
|  | 8   | BI_DD+   | -                  | Positive $V^{PSE}$ |




## 3.6. Display elements

After the supply voltage is set up, the Software starts and initializes the device. Afterwards, the device performs a self-test. During this process, various LEDs light up.


### 3.6.1. Device status

Device status display elements provide information on the operational status of the device.

**Figure 3. Device status: Location of the device status display elements on the device (device variants with 20 ports)**

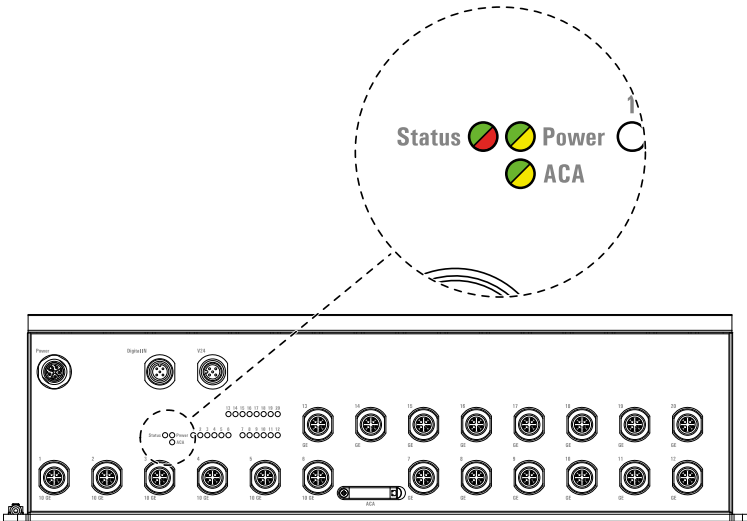

**Figure 4. Device status: Location of the device status display elements on the device (device variants with 28 ports and PoE)**

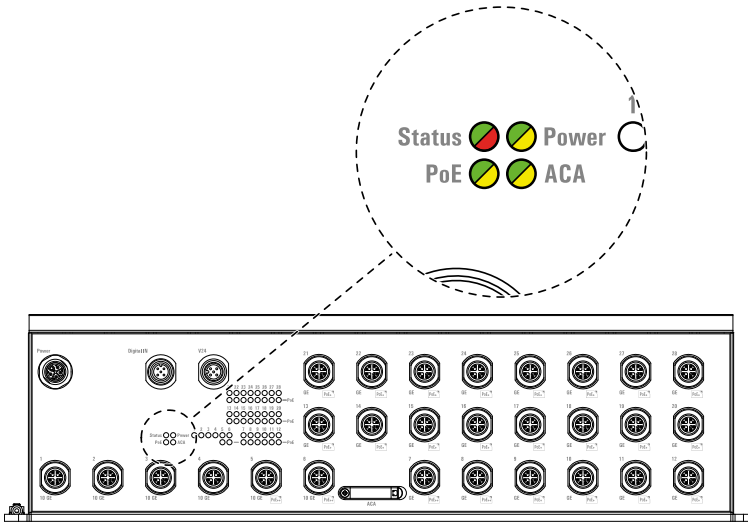

**Table 9. Power LED: Color, activity and meaning**

| Color  | Activity             | Meaning  |
|--------|----------------------|--|
| none   | none                 | Supply voltage is too low or not available             |
| yellow | flashes 4 × a period | Software update is running. Maintain the power #supply |
| green  | lights up            | Supply voltage is on                                   |

**Table 10. Status LED: Color, activity and meaning**

| Color         | Activity             | Meaning   |
|---------------|----------------------|---|
| none          | none                 | Device is starting and/or is not ready for operation  |
| red           | lights up            | Device is ready for operation<br>Device has detected at least one error in the monitoring results                           |
| red           | flashes 1 × a period | The boot parameters used when the device has been started differ from the boot parameters saved.<br>Start the device again. |
| red           | flashes 4 × a period | Device has detected a multiple IP address   |
| red/<br>green | flashes alternately  | Device is in recovery mode  |
| green         | lights up            | Device is ready for operation<br>Characteristics can be configured  |

**Table 11. ACA LED: Color, activity and meaning**

| Color  | Activity             | Meaning  |
|--------|----------------------|--|
| none   | none                 | ACA storage medium not connected                     |
| none   | none                 | Device is starting and/or is not ready for operation |
| yellow | lights up            | ACA is not ready for operation                       |
| green  | lights up            | ACA storage medium connected                         |
| green  | flashes 3 × a period | Device writes to/reads from the storage medium       |

**Table 12. PoE LED: Color, activity and meaning**


| Color | Activity  | Meaning           |
|-------|-----------|-------------------|
| green | lights up | PoE voltage is on |

**Note:** Only PoE device variants have PoE display elements.


### 3.6.2. Port status

Port status display elements provide port-related information.

**Figure 5. Port status: Location of the port status display elements on the device (device variants with 20 ports)**

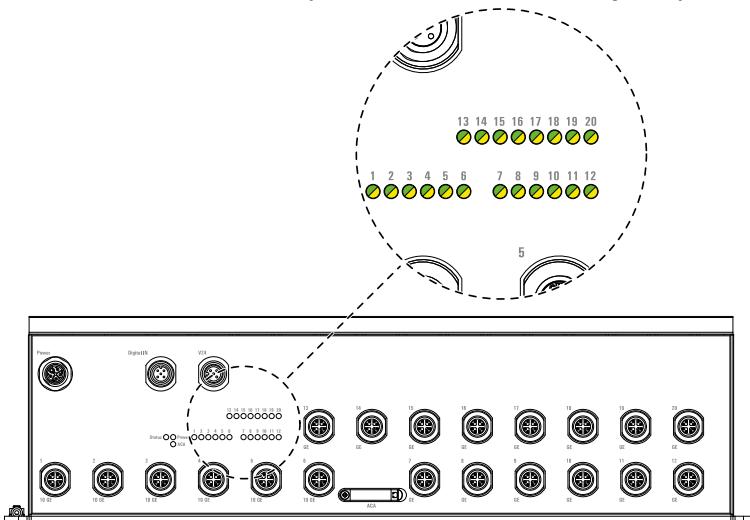

**Figure 6. Port status: Location of the port status display elements on the device (device variants with 28 ports and PoE)**

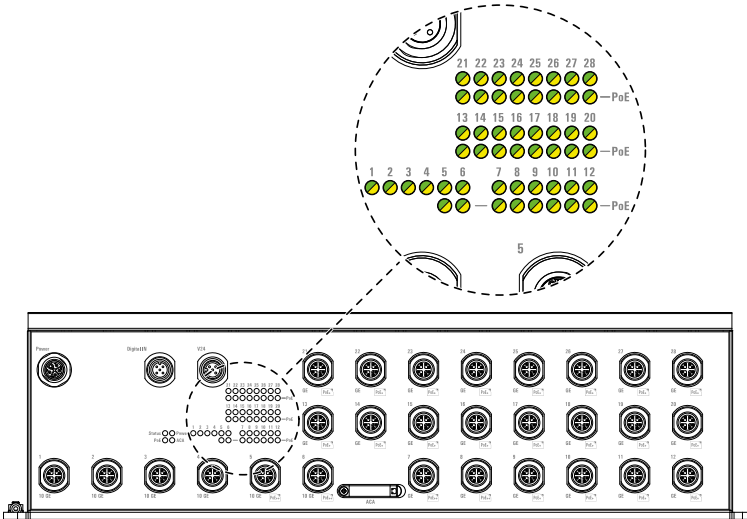

**Table 13. Port status LED: Color, activity and meaning**


| Color  | Activity             | Meaning  |
|--------|----------------------|--|
| none   | none                 | Device detects an invalid or missing link  |
| yellow | flashing             | Device is transmitting and/or receiving data   |
| yellow | flashes 1 × a period | Device detects at least one unauthorized MAC address (Port Security Violation)       |
| yellow | flashes 3 × a period | The port is switched to Standby mode or switched off by the device (auto switch off) |
| yellow | lights up            | Device detects a data rate that is not supported                                     |
| green  | lights up            | Device detects a valid link  |
| green  | flashes 1 × a period | Port is switched to stand-by   |
| green  | flashes 3 × a period | Port is switched off   |

### 3.6.3. PoE status

PoE status display elements provide PoE-related information.

**Note:** Only PoE device variants have PoE display elements.

**Figure 7. PoE status: Location of the PoE status display elements on the device (device variants with 28 ports and PoE)**

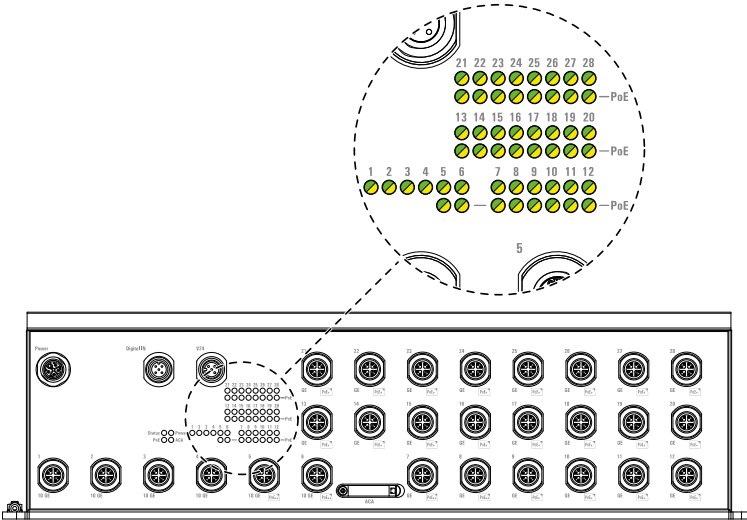

**Table 14. PoE status LED: Color, activity and meaning**

| Color  | Activity             | Meaning   |
|--------|----------------------|---|
| none   | none                 | No powered device connected   |
| yellow | flashes 1 × a period | Output budget has been exceeded<br>Device has detected a connected powered device |
| yellow | flashes 3 × a period | PoE administrator status deactivated  |
| green  | lights up            | Powered device is supplied with PoE voltage.                                      |


## 3.7. Input/output interfaces

The following input/output interface is available:

### 3.7.1. Digital input

For information about the position on the device see chapter [Device views on page 23](#).

**Table 15. Pin assignment**
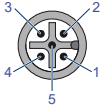
| Digital input / Signal contact<br>5-pin, "A"-coded M12 socket (male)              | Pin | Function                     |
|---|-----|------------------------------|
|  | 1   | Input +                      |
|   | 2   | NO (Normally open contact)   |
|   | 3   | NC (Normally closed contact) |
|   | 4   | Input -                      |
|   | 5   | CO (Changeover contact)      |


The digital input allows you to capture and forward signals from digital sensors. In the configuration, you specify how the device uses the digital input.

You will find detailed information on possible applications and the configuration of the digital input in the software user documentation. You will find the software user documentation as PDF files on the Internet at <https://www.doc.hirschmann.com>

### 3.7.2. Signal contact

For information about the position on the device see chapter [Device views on page 23](#).

**Table 16. Pin assignment**
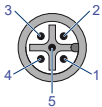
| Digital input / Signal contact<br>5-pin, "A"-coded M12 socket (male)                | Pin | Function                     |
|---|-----|------------------------------|
|  | 1   | Input +                      |
|   | 2   | NO (Normally open contact)   |
|   | 3   | NC (Normally closed contact) |
|   | 4   | Input -                      |
|   | 5   | CO (Changeover contact)      |

The signal contact is a potential-free changeover contact. If the device is not connected to a power supply, the changeover contact (5) is connected to the normally closed contact (3).

The signal contact allows you to control external devices or monitor device functions.

In the configuration, you specify how the device uses the signal contact.

You find detailed information on possible applications and the configuration of the signal contact in the software user documentation. You find the software user documentation available as download on the Internet at:

<https://www.doc.hirschmann.com>

# 4. Installation

The devices have been developed for practical application in a harsh industrial environment.

On delivery, the device is ready for operation.

Perform the following steps to install and configure the device:

- [Checking the package contents on page 40](#)
- [Mounting the device on page 40](#)
- [Grounding the device on page 47](#)
- [Connecting data cables on page 49](#)

## 4.1. Checking the package contents

- Check whether the package includes all items named in the section [Scope of delivery on page 66](#).
- Check the individual parts for transport damage.

## 4.2. Mounting the device

You have the following option(s) for mounting your device:

- [Mounting on a flat surface on page 42](#)



**⚠ WARNING****BURN HAZARD**

**Failure to follow these instructions can result in injury or equipment damage.**

The surfaces of the device casing may become hot. Avoid touching the device while it is operating.

If ambient temperatures are  $\geq 45\text{ }^{\circ}\text{C}$  ( $\geq 113\text{ }^{\circ}\text{F}$ ), exclusively install the device in “restricted access locations” according to EN 62368-1.

**⚠ CAUTION****OVERHEATING OF THE DEVICE**

**Failure to follow these instructions can result in minor injury or equipment damage.**

Verify that all ventilation fins are clear when installing the device. Avoid touching the device while it is operating.

**NOTICE****RISK OF POLLUTION AND REDUCED HEAT CONDUCTION**

**Failure to follow these instructions can result in equipment damage.**

Pollution of the thermal pads on the back of the device may cause reduced thermal conductivity, thus limiting the performance of the device.

To avoid pollution of the thermal pads, mount the device in a clean, dust-free environment. Exclusively remove the protective film of the thermal pads once you have verified that your workplace and the flat metal surface are clean.

- When selecting the installation location, verify that you observe the climatic threshold values of the device specified in the technical data. Take measures to prevent ambient conditions such as heat from affecting the device.
- Remove the provided transport protection caps and the transport protection screws from the device.
- Exclusively mount the device on a suitable flat metal surface (not included) made of solid metal without holes. For the dimensions of this flat metal surface, see [Figure 14: Dimension drawings: Drill hole locations and measurements for flat metal surface on page 60](#).

## 4.2.1. Mounting on a flat surface

### Prerequisites:

- Prepare the holes in the flat surface for mounting the device. You find dimensions for drilling and mounting the device in chapter


[Dimension drawings on page 59](#).

- Exclusively use screws, clamps, or other appropriate means suitable for the installation, environment, and use case to ensure flawless operation of the device. Hirschmann recommends using 4 metal screws (M5).
- Exclusively mount the device on a flat metal surface with the following specifications:
  - The flat metal surface must be clean, plane, solid, and without any burrs or holes other than holes used for mounting.
  - The flat metal surface consists of a material with high thermal conductivity.
  - The flat metal surface is NOT connected to any other heat source.
  - The flat metal surface has the following dimensions: See [Table 18: General data on page 56](#).
- Verify with the end user that the load-bearing capacity of the mounting points is in accordance with the weight, environment, and use case of the device.

**Perform the following work steps:**


- Prepare the flat metal surface as outlined in [Prerequisites on page 42](#).
- Remove the transport protection screws and port caps from the device ([Figure 8: Mounting on a flat surface: Removing the transport protection screws and port caps on page 44](#)).

**Figure 8. Mounting on a flat surface: Removing the transport protection screws and port caps**

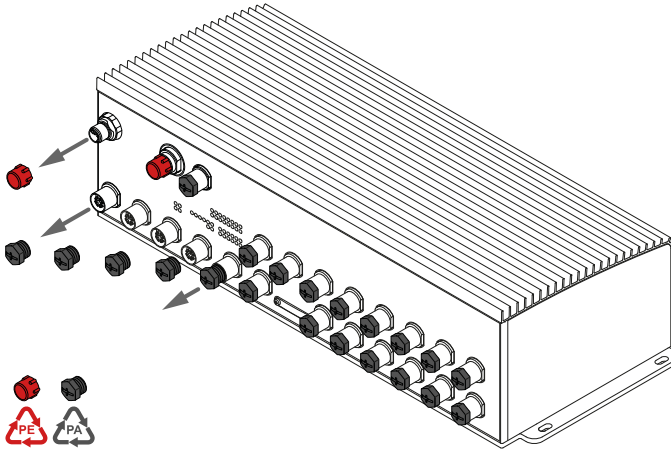


- Remove the protective film from the thermal pads on the bottom side of the device ([Figure 9: Mounting on a flat surface: Removing the protective plastic film from the thermal pads on the bottom side of the device on page 45](#)).

**Figure 9. Mounting on a flat surface: Removing the protective plastic film from the thermal pads on the bottom side of the device**

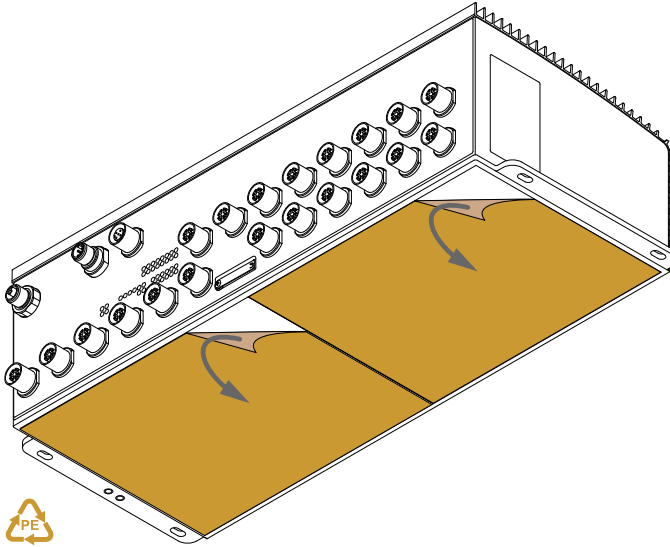

- Mount the device on the flat metal surface with 4 metal screws (M5) or other appropriate means ([Figure 10: Mounting on a flat surface: Mounting the device on a flat metal surface on page 46](#)).


**Figure 10. Mounting on a flat surface: Mounting the device on a flat metal surface**

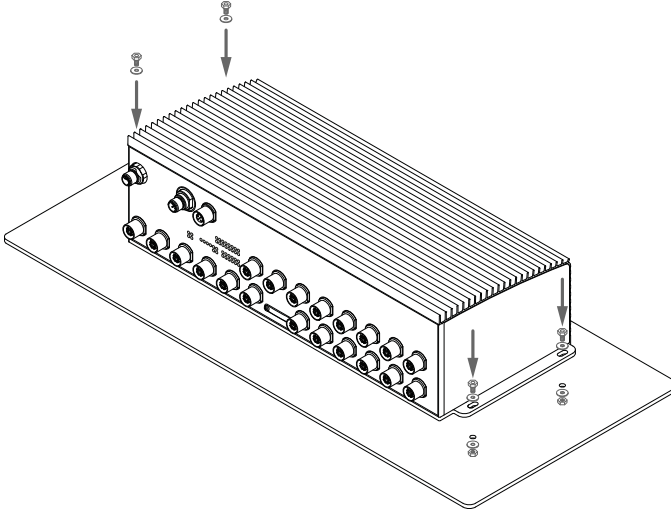


- Verify that the device is firmly mounted on the flat metal surface.
- If the flat metal surface is not the final installation location:
  - Install the device via the attached flat metal surface in a suitable installation location.
  - Verify that the device is firmly mounted in the installation location.

**Note:** For operation according to EN 45545-2 HL3: Seal all unused connections and ports exclusively with metal protection screws and metal screw caps. The use of plastic protection screws is prohibited. Protection screws and screw caps made of metal are available as [Accessories on page 66](#).

## 4.3. Grounding the device

| <b>⚠ CAUTION</b>  |   |
|---|---|
|  | <p><b>ELECTRIC SHOCK</b><br/> <b>Failure to follow these instructions can result in minor injury, or equipment damage.</b></p> <p>Ground the device before connecting any other cables.</p> |

**Figure 11. Location of the ground connection on the device (left side of the device)**

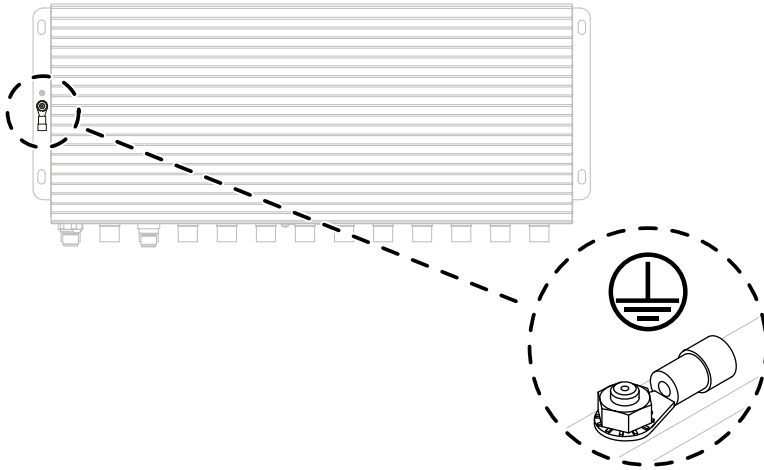

### Perform the following work steps:

- Ground the device via the ground screw (*Figure 11: Location of the ground connection on the device (left side of the device) on page 47*) with a tightening torque of 0.5 Nm ... 1.0 Nm (4.4 lb-in ... 8.8 lb-in).

The cross-section of the ground conductor must be the same size as or bigger than the cross-section of the power supply cables.

## 4.4. Connecting the supply voltage

**Note:** The supply voltage is connected to the device casing through protective elements exclusively.

### ⚠ WARNING



#### ELECTRIC SHOCK

**Failure to follow this instruction can result in death, serious injury, or equipment damage.**

Make sure that the power supply feeding the device has double or reinforced insulation.

Exclusively connect a supply voltage that corresponds to the type plate of your device.

Never insert sharp objects (small screwdrivers, wires, etc.) into the connection terminals for the supply voltage, and do not touch the terminals.

### 4.4.1. Supply voltage 110 V DC

Corresponds in the product code with the supply voltage characteristic value MB

**Table 17. 5-pin M12 connector, “K”-coded**

| Graphic | Pin | Function                           |
|---------|-----|------------------------------------|
|         | 1   | + Plus terminal of supply voltage  |
|         | 2   | Do not use                         |
|         | 3   | - Minus terminal of supply voltage |
|         | 4   | Do not use                         |
|         | 5   | PE Protective earth connection     |



For the supply voltage to be connected, perform the following work steps:

- Mount the power supply cable to the power supply connector of the device.

You find the prescribed tightening torque in chapter:

[Supply voltage 110 V DC on page 56](#)

- Enable the supply voltage.

## 4.5. Connecting data cables

Note the following general recommendations for data cable connections in environments with high electrical interference levels:

- Keep the length of the data cables as short as possible.
- When using copper cables, provide a sufficient separation between the power supply cables and the data cables. Ideally, install the cables in separate cable ducts.
- Verify that power supply cables and data cables do not run parallel over longer distances. If reducing the inductive coupling is necessary, verify that the power supply cables and data cables cross at a 90° angle.
- Use shielded data cables for gigabit transmission via copper cables. Only use shielded data cables to meet EMC requirements according to EN 50121-4 and marine applications.  
[Electromagnetic compatibility \(EMC\) on page 62](#)
- It is strongly recommended to use cable connectors with full thread and not partial thread to guarantee the electrical connection between the M12 cable and socket.
- BXP devices feature push-pull according to IEC 61076-2-010. Data cables can be connected via push-pull or screw thread, depending on the M12 connector on the cable.
- Connect the data cables according to your requirements.  
See [Ethernet ports on page 27](#)

**Perform the following work steps:**

- Connect the data cables.

**Note:** For operation according to EN 45545-2 HL3: Seal all unused connections and ports exclusively with metal protection screws and metal screw caps. The use of plastic protection screws is prohibited. Protection screws and screw caps made of metal are available as [Accessories on page 66](#).

# 5. Basic settings

## 5.1. Default settings

- Ethernet ports: link status is not evaluated (signal contact)
- IP address: The device looks for its IP address parameters using DHCP
- Management password:  
Login: user, password: public (read only)  
Login admin, password: private (read/write)
- Twisted pair ports: Autonegotiation
- Rapid Spanning Tree Protocol (RSTP): enabled
- V.24 data rate: 9600 Baud

## 5.2. First login (Password change)

To help prevent undesired access to the device, it is imperative that you change the default password during initial setup.

**Perform the following work steps:**

- Open the Graphical User Interface, the Command Line Interface, HiView, or ProVize Explorer the first time you log on to the device.
- Log on to the device with the default password "private". On successful login, the device prompts you to type in a new password.
- Type in your new password.

To help increase security, choose a password that contains at least 8 characters which includes upper-case characters, lower-case characters, numerical digits, and special characters.

- When you log on to the device with the Command Line Interface, the device prompts you to confirm your new password.

The device displays an error when the new password entered and the password confirmed do not match.

- Log on to the device again with your new password.

**Note:** If you lost your password, use the System Monitor to reset the password.

For further information, see <https://hirschmann-support.belden.com/en/kb/required-password-change-new-procedure-for-first-time-login>

## 6. Monitoring the temperature of the metal plate

Operate the device below the specified maximum temperature of the metal plate exclusively.

*[Climatic conditions during operation on page 60](#)*

The temperature displayed in the CLI (Command Line Interface) and the GUI (Graphical User Interface) is the internal temperature of the device. It is higher than the temperature of the mounting plate. The maximum internal temperature of the device named in the technical data is a guideline that indicates to you that the maximum temperature of the mounting plate has possibly been exceeded.



## 7. Maintenance and service

- When designing this device, Hirschmann largely avoided using high-wear parts. The parts subject to wear and tear are dimensioned to last longer than the lifetime of the product when it is operated normally. Operate this device according to the specifications.
- Hirschmann is continually working on improving and developing their software. Check regularly whether there is an updated version of the software that provides you with additional benefits. You find information and software downloads on the Hirschmann product pages on the Internet (<https://www.belden.com>).
- Internal fuses are triggered only in the case of a detected error in the device. In case of damage or malfunction of the device, turn off the supply voltage and return the device to the plant for inspection.

You find information on settling complaints on the Internet at: <http://www.beldensolutions.com/en/Service/Repairs/index.phtml>.

# 8. Disassembly

## 8.1. Removing the device

|  <b>WARNING</b> |   |
|--|---|
|                 | <p><b>ELECTRIC SHOCK</b><br/><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p> <p>Disconnect the grounding only after disconnecting all other cables.</p> |

### Perform the following work steps:

- Disable the supply voltage.
- Disconnect the data cables.
- Disconnect the power supply cable.
- Disconnect the grounding.
- Remove the screws.
- Remove the device from the flat metal surface.

**Note:** The thermal pad on the bottom side of the device is susceptible to pollution. If you wish to re-use the device after removal: Cover the thermal pad with plastic foil to prevent it from picking up dirt and debris.

# 9. Technical data

## 9.1. General data

**Table 18. General data**

| BXP   |  |
|---|--|
| Dimensions<br>W × H × D                                   | <a href="#">Dimension drawings on page 59</a><br>The dimensions apply to all BXP device variants.                |
| Dimensions flat metal surface<br>W × H × D (not included) | 530 mm × 270 mm × 3 mm (20.9 in × 10.63 in × 0.12 in)<br>See also: <a href="#">Dimension drawings on page 59</a> |
| Weight  | <b>BXP62 (14 × 1 Gbit/s)</b><br>5900 g<br><b>BXP62 (22 × 1 Gbit/s)</b><br>6000 g                                 |
| Mounting  | <a href="#">Mounting on a flat surface on page 42</a>  |
| Pollution degree  | 2  |
| Degree of protection                                      | IP40   |

## 9.2. Supply voltage

### 9.2.1. Supply voltage 110 V DC

**Table 19. Supply voltage with characteristic value MB**

|  |   |                               |
|--|---|-------------------------------|
| Rated voltage                              | 110 V DC  |                               |
| Voltage range including maximum tolerances | 77 V DC ... 138 V DC                            |                               |
| Connection type                            | 5-pin, "K"-coded M12 plug                       |                               |
|  | Tightening torque                               | 0.6 Nm (5.31 lb-in)           |
|  | Wire cross-section                              | 0.75 mm <sup>2</sup> (18 AWG) |
| Overload current protection on the device  | Non-replaceable fuse                            |                               |
| Power loss buffer                          | 10 ms   |                               |
| Back-up fuse for the voltage input         | Nominal rating:                                 | max. 10 A                     |
|  | Characteristic:                                 | Circuit breaker type B        |
| Peak inrush current                        | 3.3 A   |                               |
| Connection for protective ground           | <a href="#">Grounding the device on page 47</a> |                               |



**Table 19. Supply voltage with characteristic value MB (continued)**

Current integral  $I^2t$   $< 1 \text{ A}^2\text{s}$

**Table 20. Ground connection**

| Ground connection            |  |
|------------------------------|--|
| Ground connection            | <a href="#">Grounding the device on page 47</a>  |
| Connection type              | M4 screw   |
| Tightening torque            | min. 0.5 Nm<br>max. 1.0 Nm   |
| min. conductor cross-section | The cross-section of the protective conductor is the same size as or bigger than the cross-section of the power supply cables. |

## 9.3. Power consumption/power output

**Table 21. Power consumption/power output**

| Device name                 | Max. power consumption | Power output   |
|-----------------------------|------------------------|----------------|
| BXP62-14... (14 × 1 Gbit/s) | 57 W                   | 195 Btu (IT)/h |
| BXP62-22... (22 × 1 Gbit/s) | 60 W                   | 205 Btu (IT)/h |

## 9.4. Signal contact

**Table 22. Signal contact**

| Signal contact    |  |
|-------------------|--|
| Connection type   | 5-pin, "A"-coded M12 socket (male)                       |
| Tightening torque | 0.8 Nm (7.1 lb-in)                                       |
| Wire diameter     | 1.5 mm <sup>2</sup> (AWG16)                              |
| Nominal value     | $I^{\max} = 2 \text{ A}$ at $U^{\max} = 30 \text{ V DC}$ |

## 9.5. Digital input


**Table 23. Digital input**

| Digital input   |                                      |
|---|--------------------------------------|
| Connection type   | 5-pin, "A"-coded M12 socket (male)   |
|   | Tightening torque 0.8 Nm (7.1 lb-in) |
| Maximum permitted input voltage range                             | between -32 V DC and +32 V DC        |
| Nominal input voltage   | +24 V DC                             |
| Input voltage, low level, status "0"                              | -0.3 V DC ... +5 V DC                |
| Input voltage, high level, status "1"                             | +11 V DC ... +30 V DC                |
| Maximum input current at nominal input voltage                    | 15 mA                                |
| Permitted closed-circuit current for 2-wire sensors               | 1.5 mA                               |
| Input characteristic according to IEC 61131-2 (current-consuming) | Typ 3                                |


# 9.6. Dimension drawings

## 9.6.1. Dimension drawings


**Figure 12. Dimension drawings: Example of a non-PoE device variant with 20 ports**

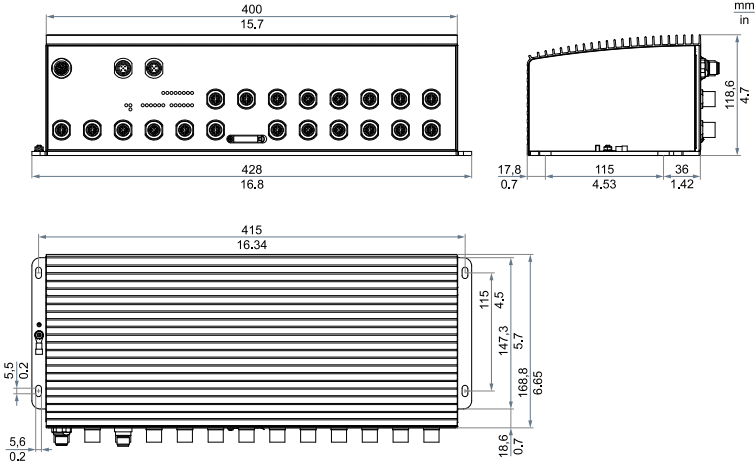

**Figure 13. Dimension drawings: Example of a PoE device variant with 28 ports**

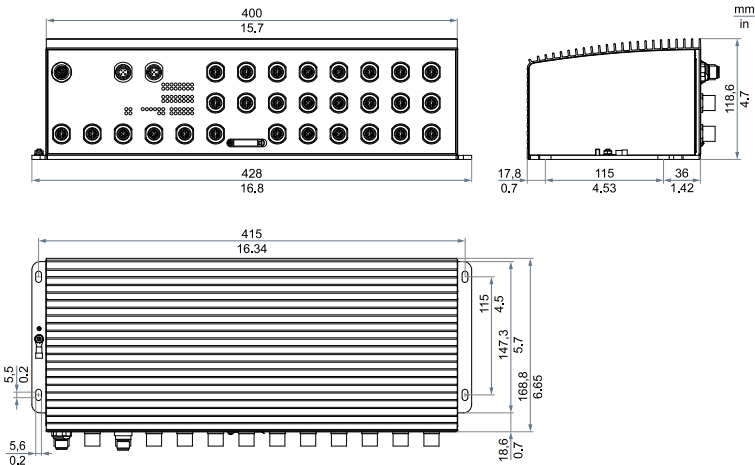

**Figure 14. Dimension drawings: Drill hole locations and measurements for flat metal surface**

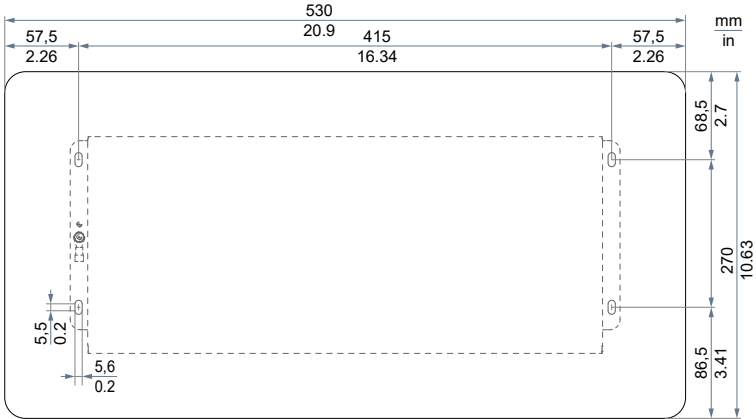

## 9.7. Climatic conditions during operation

**Table 24. Climatic conditions during operation**

| Climatic conditions during operation   |  |
|--|--|
| Temperature of the metal plate (measured at the reference point on the metal plate in a distance of 5 cm (2 in) from the device) | <b>Standard with conformal coating (characteristic value V)</b><br>-40 °C ... +60 °C (-40 °F ... +140 °F)<br><b>Extended with conformal coating (characteristic value E)</b><br>-40 °C ... +70 °C (-40 °F ... +158 °F) |
| Humidity   | 1 % ... 95 % (non-condensing)  |
| Air pressure   | min. 700 hPa (+3000 m ASL; +9842 ft ASL)<br>max. 1060 hPa (-400 m ASL; -1312 ft ASL)   |

## 9.8. Climatic conditions during storage

**Table 25. Climatic conditions during storage**

| Climatic conditions during storage |   |                |
|------------------------------------|---|----------------|
| Ambient temperature                | -40 °C ... +85 °C<br>(-40 °F ... +185 °F) | up to 3 months |
|                                    | -40 °C ... +50 °C<br>(-40 °F ... +122 °F) | up to 2 years  |

**Table 25. Climatic conditions during storage (continued)**

| Climatic conditions during storage |  |                |
|------------------------------------|--|----------------|
|                                    | 0 °C ... +30 °C (+32 °F ... +86 °F)  | up to 10 years |
| Humidity                           | 1 % ... 95 %<br>(non-condensing)   |                |
| Air pressure                       | min. 700 hPa (+3000 m ASL; +9842 ft ASL)<br>max. 1060 hPa (-400 m ASL; -1312 ft ASL) |                |

## 9.9. Immunity

**Table 26. Immunity: Standard applications**

*EN 61131-2, CE, FCC – applies to all devices*

| Applicable standard     |           |   |
|-------------------------|-----------|---|
| IEC 60068-2-6, test Fc  | Vibration | 5 Hz ... 8.4 Hz with 3.5 mm (0.14 in) amplitude |
| IEC 60068-2-6, test Fc  | Vibration | 8.4 Hz ... 200 Hz with 1 g                      |
| IEC 60068-2-27, test Ea | Shock     | 15 g at 11 ms                                   |

**Table 27. Immunity: Railway applications (on vehicles)**

*According to EN 50121-4*

| Applicable standard     |           |  |
|-------------------------|-----------|--|
| IEC 60068-2-6, test Fc  | Vibration | Operating<br>5 Hz ... 150 Hz,<br>Broadband noise<br>vertical: $1.0 \text{ m/s}^2$ (rms)<br>horizontal: $0.7 \text{ m/s}^2$ (rms)       |
| IEC 60068-2-6, test Fc  | Vibration | disabled:<br>5 Hz ... 150 Hz,<br>Broadband noise<br>vertically: $5.72 \text{ m/s}^2$ (rms)<br>horizontally: $3.96 \text{ m/s}^2$ (rms) |
| IEC 60068-2-27, test Ea | Shock     | vertical: $30 \text{ m/s}^2$ , 30 ms<br>horizontal: $50 \text{ m/s}^2$ , 30 ms   |

# 9.10. Electromagnetic compatibility (EMC)

## 9.10.1. EMC interference emission

**Table 28. EMC interference emission: Standard applications**

*EN 61131-2, CE, FCC – applies to all devices*

| Applicable standard       |  |           |
|---------------------------|--|-----------|
| <b>Radiated emission</b>  |  |           |
| FCC 47 CFR Part 15        |  | Class A   |
| EN 55032                  |  | Class A   |
| EN 61000-6-4              |  | Fulfilled |
| <b>Conducted emission</b> |  |           |
| FCC 47 CFR Part 15        |  | Class A   |
| EN 55032                  |  | Class A   |
| EN 61000-6-4              |  | Fulfilled |

**Table 29. EMC interference emission: Railway applications (trackside)**

*According to EN 50121-4*

| Applicable standard       |                               |           |
|---------------------------|-------------------------------|-----------|
| <b>Radiated emission</b>  |                               |           |
| FCC 47 CFR Part 15        |                               | Class A   |
| EN 55032                  |                               | Class A   |
| EN 61000-6-4              |                               | Fulfilled |
| <b>Conducted emission</b> |                               |           |
| FCC 47 CFR Part 15        |                               | Class A   |
| EN 55032                  | Supply connection             | Class A   |
| EN 55032                  | Telecommunication connections | Class A   |
| EN 61000-6-4              | Supply connection             | Fulfilled |
| EN 61000-6-4              | Telecommunication connections | Fulfilled |

**Table 30. EMC interference emission: Railway applications (on vehicles)***According to EN 50155*

| Applicable standard       |                               |           |
|---------------------------|-------------------------------|-----------|
| <b>Radiated emission</b>  |                               |           |
| FCC 47 CFR Part 15        |                               | Class A   |
| EN 55032                  |                               | Class A   |
| EN 61000-6-4              |                               | Fulfilled |
| EMV 06 Rev. 2.0           |                               | Class S1  |
| <b>Conducted emission</b> |                               |           |
| FCC 47 CFR Part 15        |                               | Class A   |
| EN 55032                  | Supply connection             | Class A   |
| EN 55032                  | Telecommunication connections | Class A   |
| EN 61000-6-4              | Supply connection             | Fulfilled |
| EN 61000-6-4              | Telecommunication connections | Fulfilled |

## 9.10.2. EMC interference immunity

**Table 31. EMC interference immunity: Standard applications***EN 61131-2, CE, FCC – applies to all devices*

| Applicable standard            |                         |        |
|--------------------------------|-------------------------|--------|
| <b>Electrostatic discharge</b> |                         |        |
| EN 61000-4-2                   | Contact discharge       | ±4 kV  |
| EN 61000-4-2                   | Air discharge           | ±8 kV  |
| <b>Electromagnetic field</b>   |                         |        |
| EN 61000-4-3                   | 80 MHz ... 800 MHz      | 10 V/m |
| EN 61000-4-3                   | 80 MHz ... 1000 MHz     | 10 V/m |
| EN 61000-4-3                   | 1.4 GHz ... 2.0 GHz     | 3 V/m  |
| EN 61000-4-3                   | 2.0 GHz ... 2.7 GHz     | 1 V/m  |
| EN 61000-4-3                   | 2.7 GHz ... 5.1 GHz     | 3 V/m  |
| EN 61000-4-3                   | 5.1 GHz ... 6.0 GHz     | 3 V/m  |
| <b>Fast transients (burst)</b> |                         |        |
| EN 61000-4-4                   | Power supply connection | ±2 kV  |

**Table 31. EMC interference immunity: Standard applications***EN 61131-2, CE, FCC – applies to all devices***(continued)**

| Applicable standard                             |                    |       |
|---|--------------------|-------|
| EN 61000-4-4                                    | Data line          | ±1 kV |
| <b>Voltage surges - power supply connection</b> |                    |       |
| EN 61000-4-5                                    | line/ground        | ±2 kV |
| EN 61000-4-5                                    | line/line          | ±1 kV |
| <b>Voltage surges - data line</b>               |                    |       |
| EN 61000-4-5                                    | line/ground        | ±1 kV |
| <b>Conducted disturbances</b>                   |                    |       |
| EN 61000-4-6                                    | 150 kHz ... 80 MHz | 10 V  |

**Table 32. EMC interference immunity: Railway applications (trackside)***According to EN 50121-4*

| Applicable standard                             |                         |        |
|---|-------------------------|--------|
| <b>Electrostatic discharge</b>                  |                         |        |
| EN 61000-4-2                                    | Contact discharge       | ±6 kV  |
| EN 61000-4-2                                    | Air discharge           | ±8 kV  |
| <b>Electromagnetic field</b>                    |                         |        |
| EN 61000-4-3                                    | 80 MHz ... 800 MHz      | 10 V/m |
| EN 61000-4-3                                    | 80 MHz ... 1000 MHz     | 20 V/m |
| EN 61000-4-3                                    | 1.4 GHz ... 2.0 GHz     | 10 V/m |
| EN 61000-4-3                                    | 2.0 GHz ... 2.7 GHz     | 5 V/m  |
| EN 61000-4-3                                    | 5.1 GHz ... 6.0 GHz     | 3 V/m  |
| <b>Fast transients (burst)</b>                  |                         |        |
| EN 61000-4-4                                    | Power supply connection | ±2 kV  |
| EN 61000-4-4                                    | Data line               | ±2 kV  |
| <b>Voltage surges - power supply connection</b> |                         |        |
| EN 61000-4-5                                    | line/ground             | ±2 kV  |
| EN 61000-4-5                                    | line/line               | ±1 kV  |
| <b>Voltage surges - data line</b>               |                         |        |
| EN 61000-4-5                                    | line/ground             | ±2 kV  |



**Table 32. EMC interference immunity: Railway applications (trackside)***According to EN 50121-4***(continued)**

| <b>Applicable standard</b>    |                    |      |
|-------------------------------|--------------------|------|
| <b>Conducted disturbances</b> |                    |      |
| EN 61000-4-6                  | 150 kHz ... 80 MHz | 10 V |

**Table 33. EMC interference immunity: Railway applications (on vehicles)***According to EN 50155*

| <b>Applicable standard</b>                      |                         |        |
|---|-------------------------|--------|
| <b>Electrostatic discharge</b>                  |                         |        |
| EN 61000-4-2                                    | Contact discharge       | ±6 kV  |
| EN 61000-4-2                                    | Air discharge           | ±8 kV  |
| <b>Electromagnetic field</b>                    |                         |        |
| EN 61000-4-3                                    | 80 MHz ... 800 MHz      | 20 V/m |
| EN 61000-4-3                                    | 80 MHz ... 1000 MHz     | 20 V/m |
| EN 61000-4-3                                    | 1.4 GHz ... 2.0 GHz     | 10 V/m |
| EN 61000-4-3                                    | 2.0 GHz ... 2.7 GHz     | 5 V/m  |
| EN 61000-4-3                                    | 5.1 GHz ... 6.0 GHz     | 3 V/m  |
| <b>Fast transients (burst)</b>                  |                         |        |
| EN 61000-4-4                                    | Power supply connection | ±2 kV  |
| EN 61000-4-4                                    | Data line               | ±2 kV  |
| <b>Voltage surges - power supply connection</b> |                         |        |
| EN 61000-4-5                                    | line/ground             | ±2 kV  |
| EN 61000-4-5                                    | line/line               | ±1 kV  |
| <b>Voltage surges - data line</b>               |                         |        |
| EN 61000-4-5                                    | line/ground             | ±2 kV  |
| <b>Conducted disturbances</b>                   |                         |        |
| EN 61000-4-6                                    | 150 kHz ... 80 MHz      | 10 V   |

## 9.11. Accessories

**Table 34. General accessories**

| Article   | Order number |
|---|--------------|
| AutoConfiguration Adapter ACA31   | 942074001    |
| Field attachable connector for the power supply, M12, "K"-coded, for crimp connections with wire diameter 1.5 mm <sup>2</sup> (AWG16) | 934935002    |
| Network management software Industrial HiVision   | 943156xxx    |
| Protection screw for M12 socket, metal, IP65/67/69K (25 pieces)   | 942057001    |
| Protection screw for M12 socket, plastic, IP65/67 (25 pieces)   | 942057002    |
| Terminal cable  | 943902001    |

## 9.12. Scope of delivery

**Table 35. Scope of delivery**

| Amount | Article  |
|--------|--|
| 1 ×    | Device   |
| 1 ×    | Safety and general information sheet   |
| 1 ×    | Exclusively for device variants featuring supply voltage with characteristic value MB:<br>Connector for the power supply, M12, "K"-coded |

## 9.13. Order numbers

**Table 36. Order numbers for standard variants**

| Device                | Product code                            | Order number |
|-----------------------|---|--------------|
| BXP62 20TX-EECC-HV-2A | BXP62-140006IISHF9-EMBFS9H-HSE2AXX.X.XX | 942334001    |
| BXP62 20TX-EECC-HV-3A | BXP62-140006IISHF9-EMBFS9H-HSE3AXX.X.XX | 942334002    |
| BXP62 28TX-EECC-HV-2A | BXP62-220006IISHFF-EMBFS9H-HSE2AXX.X.XX | 942334003    |
| BXP62 28TX-EECC-HV-3A | BXP62-220006IISHFF-EMBFS9H-HSE3AXX.X.XX | 942334004    |

**Table 36. Order numbers for standard variants (continued)**

| Device                       | Product code                                     | Order number |
|------------------------------|--|--------------|
| BXP60 20TX-EECC-HV-2A        | BXP62-140006KKSHF9-EMBFS9H-HSE2AXX.X.XX          | 942334005    |
| BXP60 20TX-EECC-HV-3A        | BXP62-140006KKSHF9-EMBFS9H-HSE3AXX.X.XX          | 942334006    |
| BXP60 28TX-EECC-HV-2A        | BXP62-220006KKSHFF-EMBFS9H-HSE2AXX.X.XX          | 942334007    |
| BXP60 28TX-EECC-HV-3A        | BXP62-220006KKSHFF-EMBFS9H-HSE3AXX.X.XX          | 942334008    |
| BXP60-20TX-EECC-HV-2A        | BXP60-140006IIIIGE9-ENBFS9H-HSE2AXX.X.XX         | 942334009    |
| BXP62-HR 28TX-EECC-LV-3A-FX  | BX-<br>P62-220006AISHFF-EHBRS9HRSE3AXX.X-<br>.XX | 942334017    |
| BXP62-HR 28TX-EECC-HV-3A-FX  | BXP62-220006AISHFF-EM-BRS9HRSE3AXX.X.XX          | 942334018    |
| BXP62-HR 28TX-EECC-LV-3A-BP  | BX-<br>P62-220006KISHFF-EHBRS9HRSE3AXX.X-<br>.XX | 942334019    |
| BXP62-HR 28TX-EECC-HV-3A-BP  | BXP62-220006KISHFF-EM-BRS9HRSE3AXX.X.XX          | 942334020    |
| BXP62-HR 28TX-EECC-LV-3A-2BP | BX-<br>P62-220006KKSHFF-EHBRS9HRSE3AXX.X-<br>.XX | 942334021    |
| BXP62-HR 28TX-EECC-HV-3A-2BP | BXP62-220006KKSHFF-EM-BRS9HRSE3AXX.X.XX          | 942334022    |

## 9.14. Underlying technical standards

The device has an approval based on a specific standard exclusively if the approval indicator appears on the device casing.

The device generally fulfills the technical standards named in their current versions.

**Table 37. List of the technical standards**

|        |  |
|--------|--|
| EMV 06 | Regulation No. EMV 06: Technical rules for electromagnetic compatibility – Proof of radio compatibility of rail vehicles with railway radio services |
|--------|--|

**Table 37. List of the technical standards (continued)**

|                    |   |
|--------------------|---|
| EN 50121-4         | Railway applications – EMC – Emission and immunity of the signaling and telecommunications apparatus (Rail Trackside) |
| EN 50155           | Railway applications – Electronic equipment on rail vehicles  |
| EN 61131-2         | Programmable controllers – Part 2: Equipment requirements and tests   |
| IEC/EN 62368-1     | Equipment for audio/video, information and communication technology - Part 1: Safety requirements                     |
| FCC 47 CFR Part 15 | Code of Federal Regulations   |
| IEEE 802.3         | Ethernet  |
| UL 61010-1/-2-201  | Safety for Industrial Control Equipment   |
| UN/ECE No. 10      | E type approval for use in vehicles.  |
| UN/ECE No. 118     | Burning behaviour of materials used in motor vehicles.  |
| IEC 62443-4-2      | Security for industrial automation and control systems.   |

# A. Further support

## Technical questions

For technical questions, please contact any Hirschmann dealer in your area or Hirschmann directly.

You find the addresses of our partners on the Internet at:

<https://www.belden.com>

A list of local telephone numbers and email addresses for technical support directly from Hirschmann is available at:

<https://hirschmann-support.belden.com>

This site also includes a free of charge knowledge base and a software download section.

## Customer Innovation Center

The Customer Innovation Center is ahead of its competitors on three counts with its complete range of innovative services:

- Consulting incorporates comprehensive technical advice, from system evaluation through network planning to project planning.
- Training offers you an introduction to the basics, product briefing and user training with certification.

You find the training courses on technology and products currently available at:

<https://www.belden.com/solutions/customer-innovation-center>

- Support ranges from the first installation through the standby service to maintenance concepts.

With the Customer Innovation Center, you decide against making any compromises in any case. Our client-customized package leaves you free to choose the service components you want to use on the Internet at:

<https://www.belden.com/solutions/customer-innovation-center>



**HIRSCHMANN**

---

A **BELDEN** BRAND